


**Installation stages of Hercules & Pegasus** 

## + + + ENESSERE

## **Installation stages of Hercules & Pegasus**

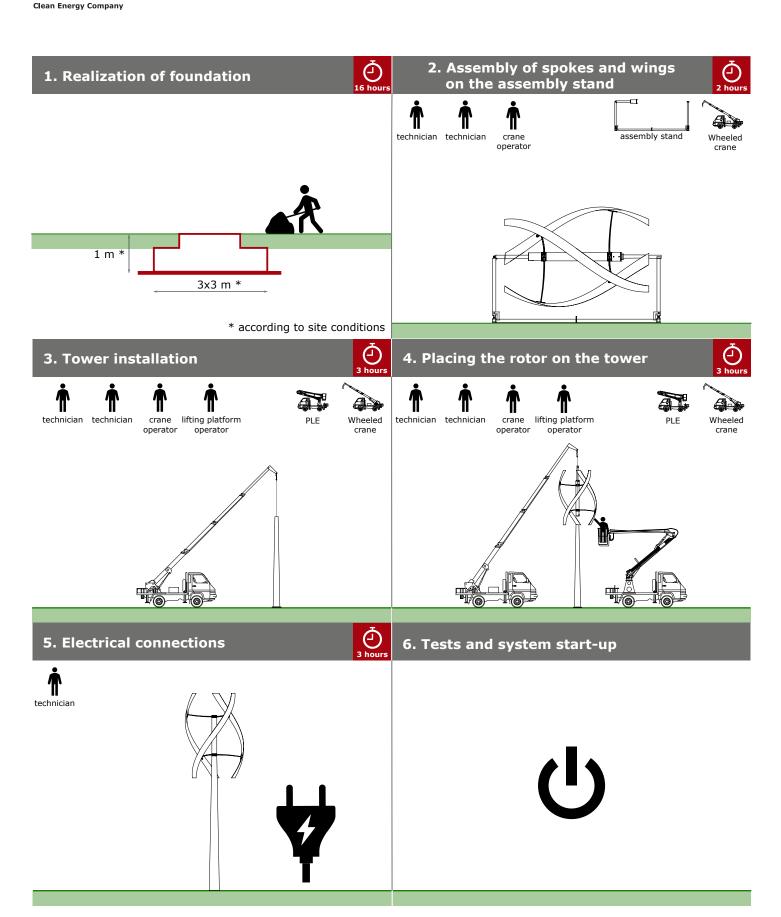



## • 6÷11T bearing capacity with 15 m outreach • Lifting of the load at a height of 15 m, with the same height of upper tower connection level and level of stabilization of the crane

